

Explosionengeschützte Version
des wetterfesten Telefons FernTel IP

FernTel IP Z2 / Z22



Betriebsanleitung

EATON

Powering Business Worldwide



Das Telefon FernTel IP Z2/Z22 ist eine explosionsgeschützte Version des wetterfesten Telefons FernTel IP und besitzt alle seine Merkmale. Die Betriebsanleitung behält seine Gültigkeit und wird um die nachstehenden Punkte erweitert.

Anwendung

Das Telefon FernTel IP Z2/Z22 wird als ortsfestes Gerät in Bereichen eingesetzt, die durch eine explosionsfähige Gas- oder Staubatmosphäre gefährdet werden können.

Konstruiert für die Gerätegruppe II und die Kategorie 3G und 3D ist es innerhalb der Zone 2 und der Zone 22 verwendbar.

Das Telefon FernTel IP Z2/Z22 muss mit einem LAN (Local Area Network) Anschluss verbunden werden, der über PoE (Power over Ethernet) verfügt.

Inbetriebnahme

Für Betrieb und Inbetriebnahme ist die Anwendung des Standard IEEE 802.3af verbindlich.

Das FernTel IP Z2/Z22 besitzt im Gegensatz zum normalen FernTel IP keine Steckbuchse für das LAN-Kabel. Ebenso ist die zweite LAN-Buchse an der rechten Seite des Telefons entfallen. Damit gehört der LAN-Stecker für das LAN-Kabel nicht mehr zum Lieferumfang.

Führen Sie bei abgenommener Tastaturplatte (Pos 6) des FernTel IP Z2/Z22 das LAN-Kabel durch die Kabelleitungseinführung (Pos 4) an der unteren Seite des Telefons und fixieren Sie das Kabel mit der KLE.

Dem FernTel IP Z2/Z22 ist in einer Tüte eine Anschlussbuchse mit Schneidklemmvorrichtung beigelegt, um das LAN-Kabel mit dem kurzen, 8-poligen Kabelstück im Innern des Telefons verbinden zu können.

Folgen Sie den Anweisungen auf der Tüte für das Ablängen und Verlegen der Einzeladern und befestigen Sie das LAN-Kabel an der Buchse. Achten Sie dabei auf die Farbmarkierungen für die Verkabelungsstandards T568A (Reihe A) und T568B (Reihe B). Stecken Sie anschließend den Stecker des kurzen Kabelstücks (Pos 5) bis zur Verrastung in diese Buchse.

Stecken Sie den Steckverbinder des Flachbandkabels auf die Stiftleiste (Pos 7) der Tastatur, setzen Sie die Tastaturplatte wieder auf das Telefongehäuse und ziehen Sie die vier Schrauben (Pos 8) fest.

Anschließen und Einstellen

Der Anschluss erfolgt über ein RJ45 Stecker im VoIP-Telefon mit folgender normativer PoE-Belegung:


| RJ45-Stecker | PIN | Spare-Pair-Speisung | Phantom-Speisung | |
|--------------|-----|---------------------|------------------|----------|
| | | | Midi-x | Midi |
| | 1 | RX+ | Rx+ / V- | Rx+ / V+ |
| | 2 | RX- | Rx- / V- | Rx- / V+ |
| | 3 | TX+ | Tx+ / V+ | Tx / V- |
| | 4 | V+ | - | - |
| | 5 | V+ | - | - |
| | 6 | TX+ | Tx- / V+ | Tx / V- |
| | 7 | V- | - | - |
| | 8 | V- | - | - |

Beim Anschließen der Leitung ist darauf zu achten, dass die abisolierten blanken Leitungsadern in der Steckverbindung liegen und sicher befestigt werden.

Die äußere Anschlussklemme des elektrostatischen Potentialausgleichs (17) muss mit dem Potentialausgleich am Errichtungsort verbunden werden, damit wird beim Auftreten elektrostatischer Phänomene eine gefährliche elektrostatische Aufladung verhindert.

Kennzeichnung am Anschluss

X101

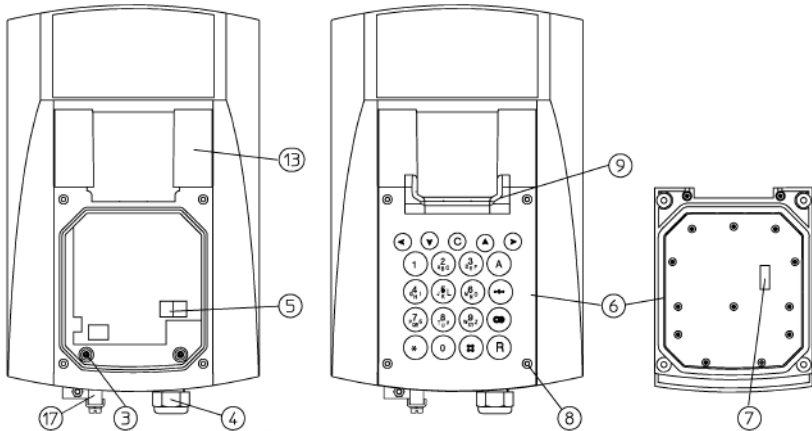

Die Konfiguration des FernTel IP Z2 / Z22 erfolgt wie sie in der Betriebsanleitung des normalen FernTel IP beschrieben ist.

Betriebsgebrauchslage

Das Telefon ist zur Wandmontage und als Tischgerät geeignet.

Instandhaltung

Das Telefon enthält keine Verschleißteile, die Maßnahmen zur Instandhaltung erfordern.

Pflege und Wartung

Das Telefon ist wartungsfrei. Dennoch sollte in Einsatzbereichen mit starker Verschmutzung durch Staub, Fett, Öl usw. von Zeit zu Zeit eine Reinigung durchgeführt werden.

Reinigungsarbeiten dürfen nur mit einem feuchten Tuch durchgeführt werden, um elektrostatische Aufladungen zu vermeiden.

Zur Reinigung niemals spitze Gegenstände verwenden.

Während der Wartung sind zugängliche Dichtungen auf Tauglichkeit zu prüfen, z. B. hinsichtlich Beschädigung und Positionierung. Mit defekten Dichtungen ist der Betrieb des Telefons nicht zulässig. Defekte Dichtungen müssen erneuert werden.

Entsorgung

Die Komplett-Entsorgung erfolgt über den Elektronikabfall. Bei der Demontage sind die Komponenten Kunststoff, Metall und Elektronik separat zu entsorgen. In jedem Fall sind die Entsorgungsbedingungen des jeweiligen Einsatzlandes zu beachten.

Technische Daten

Anschlusswerte an X101

| | |
|---------------------------------|--|
| Stromversorgung | Power over Ethernet nach IEEE 802.3af |
| Spannung P _{oE} | 48 VDC (Min. 44 V, Max. 61 V) |
| Leistungsbedarf | 3,5 W |
| Display | 128 x 64 Pixel |
| Tonruflautstärke | max. ca. 95 dB(A) in 1 m Abstand |
| Gehäuse (Höhe x Breite x Tiefe) | 293 x 191 x 128 |
| Gewicht | ca. 2300 g |
| Betriebsgebrauchslage | Tisch- oder senkrechte Wandmontage |
| Hörer | Elektretmikrofon |
| Mikrofon | dynamische Kapsel mit Magnetfelderzeuger |
| Hörkapsel | |
| Anschluss X101 | (10/100 Mbit/s) LAN Kabel mit 8 Adern AWG 22 bis 24 bei eindrätigen Leitern oder AWG 24 bei mehrdrätigen Leitern |


Abmessungen Anschlussleitung / Kabelzugang

| | |
|---------------------------------|--|
| Kabel- und Leitungseinführungen | M20 x 1,5 Bei den werkseitig bestückten Kabeleinführungen ist die beigefügte Betriebsanleitung zu beachten |
| Blindverschraubungen | M20 x 1,5 / M12 x 1,5 |
| Anschluss Potenzialausgleich | 1,5 – 4 mm ² |

Umgebungstemperaturbereich

| | |
|--------------------------------|--------------------|
| Betriebsumgebungstemperatur | -20°C ≤ Ta ≤ +55°C |
| Lager- und Transporttemperatur | -25°C ≤ Ta ≤ +70°C |
| Gehäuseschutzart | IP65 |

Kennzeichnung

| | |
|---|---|
| Firma | FHF Funke+Huster Fernsig GmbH |
| Typ | FernTel IP Z2 |
| DEKRA | BVS 08 ATEX E 022 |
| CE 0158  | II 3G Ex ec ic IIC T5 Gc II 3D Ex tc ic IIIC T80°C Dc -20°C ≤ Ta ≤ +55°C IP65 U _m = 61 VDC; U _n = 48 VDC |
| IECEX | Ex ec ic IIC T5 Gc Ex tc ic IIIC T80°C Dc IECEX BVS 08.0009 |

Warn- und Sicherheitshinweise

Bei diesem Gerät handelt es sich um ein explosionsgeschütztes, wetterfestes Telefon speziell für den Betrieb in rauer Industrieumgebung.

Nachstehende Warn- und Sicherheitshinweise sind zu beachten:

- Der Anschluss und die Installation des Gerätes haben unter Beachtung der angegebenen Zündschutzarten gemäß den vorgeschriebenen Errichtungsvorschriften von einem unterwiesenen Fachmann zu erfolgen.
- Dieses Gerät ist in Schutzklasse II aufgebaut und darf nur an der vorgeschriebenen Spannung angeschlossen und betrieben werden.
- Es ist auf einen ordnungsgemäßen Anschluss zu achten.
- Es ist darauf zu achten, dass das Telefongehäuse, das Anschlusskabel und die Hörschnur nicht beschädigt sind. Im beschädigten Zustand darf das Gerät nicht betrieben werden.
- Bei Betrieb des Gerätes in gewerblichen Einrichtungen sind die Unfallverhütungsvorschriften der gewerblichen Berufsgenossenschaften für elektrische Anlagen und Betriebsmittel zu beachten.
- Das Gerät darf nur unter den angegebenen Umgebungsbedingungen betrieben werden. Widrige Umgebungsbedingungen können zur Beschädigung des Gerätes führen und damit zu einer eventuellen Gefahr für das Leben des Benutzers.
- Bei der Montage und Installation sind die jeweils geltenden Errichtungsbestimmungen zu beachten.

Solche widrigen Umgebungsbedingungen sind:

- Zu hohe Luftfeuchtigkeit (>75% rel., kondensierend)
- Nässe und Stäube (Schutzart beachten)
- Brennbare Gase, Dämpfe und Lösungsmittel, die nicht durch die Zündschutzart des Gerätes abgedeckt sind.
- Zu hohe Umgebungstemperaturen (> +55°C)
- Zu niedrige Umgebungstemperaturen (< -20°C)
- Der für das Gerät angegebene Umgebungstemperaturbereich darf während des Betriebes weder unter- noch überschritten werden. Es ist verboten, das Gerät mit einer zusätzlichen Abdeckung zu betreiben.
- Bei Anschluss oder Trennung von Leitungen im Anschlussraum, müssen die Leitungen spannungsfrei geschaltet sein.
- Müssen Anschlussarbeiten im explosionsgefährdeten Bereich vorgenommen werden, muss das dazu erforderliche Öffnen und Schließen wie folgt durchgeführt werden:
 - Gerät spannungsfrei schalten
 - Befestigungsschrauben des Tastatureinsatzes lösen
 - Tastatureinsatz abnehmen und das Kabel zur Tastatur lösen
 - Anschluss am geöffneten Gerät vornehmen

- Nach Abschluss der Arbeiten ist die Tastatur wieder anzustecken und der Tastatureinsatz wieder auf das Unterteil aufzusetzen

Es ist auf die richtige Position und Unversehrtheit der Dichtung zu achten. Danach sind die Befestigungsschrauben wechselseitig fest anzuziehen.

- Es dürfen nur die vom Hersteller vorgeschriebenen Verschlussstopfen, Kabel- und Leitungseinführungen verwendet werden.

Bei Nichtbeachtung der vorgenannten Punkte ist der Explosionsschutz des Gerätes nicht mehr gegeben. Das Gerät stellt dann eine Gefahr für das Leben des Benutzers dar und kann die Zündung einer explosionsfähigen Atmosphäre verursachen.

CE-Zeichen

Wir erklären hiermit, dass sich dieses Produkt in Übereinstimmung mit den grundlegenden Sicherheits- und Gesundheitsanforderungen

der ATEX-Richtlinie 2014/34/EU,

der EMV-Richtlinie 2014/30/EU,

der Niederspannungsrichtlinie 2014/35/EU

und der RoHS-Richtlinie 2011/65/EU

befindet.

Die entsprechenden Normen, technischen Regeln und Spezifikationen entnehmen Sie bitte der beigefügten Konformitätserklärung und den Konformitätserklärungen auf unserer Website.

Änderungen und
Irrtum vorbehalten

FHF Funke + Huster Fernsig GmbH · Gewerbeallee 15-19 · D-45478 Mülheim an der Ruhr · Germany
Phone +49 - 208 - 82 68 - 0 · Fax +49 - 208 - 82 68 - 286 · Mail info@fhf.de · www.fhf.de
Orders: fhf-orders@eaton.com · Requests: fhf-sales@eaton.com · Support: fhf-support@eaton.com

EATON

Powering Business Worldwide

Eaton's Crouse-Hinds Business

1201 Wolf Street · Syracuse, NY 13208

(866) 764-5454

crouse.customerctr@cooperindustries.com

Eaton is a registered trademark.

All other trademarks are property of their respective owners.

Flameproof version of the
weatherproof telephone FernTel IP

FernTel IP Z2 / Z22



Operating instructions

EATON

Powering Business Worldwide



The FernTel IP Z2/Z22 telephone is a flameproof version of the weatherproof FernTel IP telephone with all its features. The operating instructions are still valid, with the addition of the following items.

Operation

The FernTel IP Z2 / Z22 telephone is used as a stationary device in areas potentially endangered by an explosive gas or dust atmosphere.

Designed for Device Group II and Categories 3G and 3D, it may be operated within zones 2 and 22.

The FernTel IP Z2 / Z22 telephone must be connected to a LAN (Local Area Network) connection equipped with PoE (Power over Ethernet).

Commissioning

For operation and commissioning, the application of standard IEEE 802.3af is compulsory.

Contrary to the normal FernTel IP, the FernTel IP Z2 / Z22 has no LAN cable plug bush. Also, there is no second LAN receptacle on the right-hand side of the telephone. Thus the LAN plug for the LAN cable is no longer part of the delivery.

Remove the keypad plate (item 6) of the FernTel IP Z2 / Z22, and guide the LAN cable through the cable gland (item 4) on the lower side of the telephone, and secure the cable using the cable gland.

The FernTel IP Z2 / Z22 delivery includes a bag with a connector socket with a cut-and-clamp device for connecting the LAN cable with the short, 8 pin cable piece within the telephone.

Follow the instructions on the bag for shortening and placing the individual conductors, and secure the LAN cable to the connector. Please pay attention to the coloured markings for the wiring standards T568A (A series) and T568B (B series). Then insert the plug of the short piece of cable (item 5) into this connector, until it clicks into place.

Plug the connector of the ribbon cable onto the pin contact strip (item 7) on the keypad, replace the keypad plate onto the telephone housing and tighten the four screws (item 8) firmly.

Connecting and adjusting

Connect the device using an RJ45 plug in the VoIP telephone with the following normative PoE allocation:


| RJ45 plug | PIN | Spare-Pair supply | Phantom supply | |
|-----------|-----|-------------------|----------------|----------|
| | | | Midi-x | Midi |
| | 1 | RX+ | Rx+ / V- | Rx+ / V+ |
| | 2 | RX- | Rx- / V- | Rx- / V+ |
| | 3 | TX+ | Tx+ / V+ | Tx / V- |
| | 4 | V+ | - | - |
| | 5 | V+ | - | - |
| | 6 | TX+ | Tx- / V+ | Tx / V- |
| | 7 | V- | - | - |
| | 8 | V- | - | - |

Upon connecting the cable, please make sure the exposed conductors are placed in the plug connector and are securely fastened.

The outer terminal of the electrostatic potential compensation (17) must be connected to the potential compensation at the place of installation, in order to avoid a dangerous electrostatic build-up in case of any electrostatic occurrence.

Marking on connection

X101

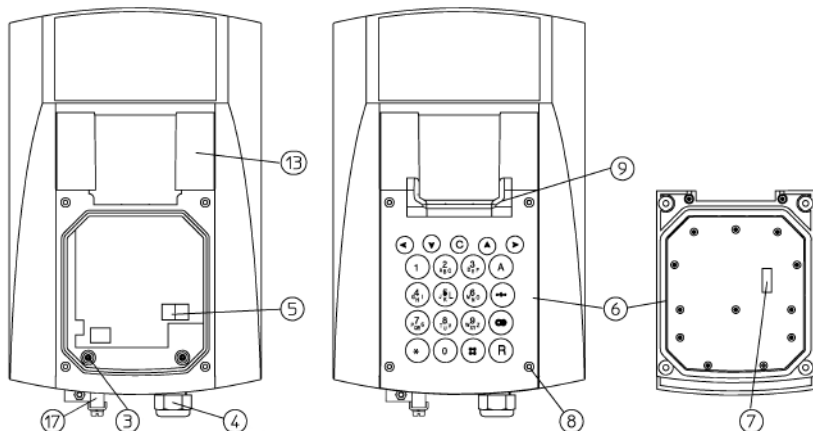

The configuration of the FernTel IP Z2 / Z22 follows as described in the operating instructions of the normal FernTel IP.

Operating position

The telephone may be mounted on a wall or used as a desk telephone.

Service

The telephone contains no serviceable parts.

Care and maintenance

The telephone is maintenance-free. Still, if the operating area is highly contaminated by dust, fat, oil etc., the device should be cleaned from time to time.

The device may only be cleaned using a damp cloth in order to avoid electrostatic charging.

Never use sharp objects for cleaning.

During maintenance, check accessible seals for function, e.g. regarding possible damage or positioning. If the seals are damaged, operating the telephone is not allowed. Damaged seals must be replaced.

Disposal

The complete device should be disposed of as electronic waste. When the device is disassembled, plastics, metals and electronics components are to be disposed of separately. In every single case the national requirements and regulations for waste disposal must be observed.

Technical Specifications

Connection data at X101

| | | |
|----------------------------------|---|--|
| Power supply | Power over Ethernet according to IEEE 802.3af | |
| Voltage POE | 48 VDC (min. 44 V, max. 61 V) | |
| Power consumption | 3.5 W | |
| Display | 128 x 64 pixels | |
| Ringling sound pressure level | max. approx. 95 dB (A) at 1 m | |
| Housing (height x width x depth) | 293 x 191 x 128 | |
| Weight | approx. 2,300 g | |
| Operating position | Table or vertical wall mounting | |
| Receiver | Microphone | Electret-foil microphone |
| | Receiver inset | Dynamic receiver inset with magnetic field generator |
| Connection X101 | (10/100 Mbit/s) LAN cable with 8 conductors AWG 22 to 24 for solid conductors, or AWG 24 for multi-wired conductors | |


Dimensions Connecting cable / Cable entry

| | |
|-----------------------------------|--|
| Cable glands | M20 x 1,5 In case of factory fitted cable glands the attached operating instructions have to be considered. |
| Blind plugs | M20 x 1,5 / M12 x 1,5 |
| Connection potential compensation | 1,5 – 4 mm ² |

Ambient temperature range

| | |
|-------------------------------------|--------------------|
| Operating ambient temperature range | -20°C ≤ Ta ≤ +55°C |
| Storage and transport temperature | -25°C ≤ Ta ≤ +70°C |
| Housing degree of protection | IP65 |

Labelling

| | |
|---|---|
| Firma | FHF Funke+Huster Fernsig GmbH |
| Type | FernTel IP Z2 |
| DEKRA | BVS 08 ATEX E 022 |
| CE 0158  | II 3G Ex ec ic IIC T5 Gc II 3D Ex tc ic IIIC T80°C Dc -20°C ≤ Ta ≤ +55°C IP65 U _m = 61 VDC; U _n = 48 VDC |
| IECEX | Ex ec ic IIC T5 Gc Ex tc ic IIIC T80°C Dc IECEX BVS 08.0009 |

Warnings and security information

This device is a flameproof, weatherproof telephone especially designed for use in rough industrial environments.

Please note the following warnings and security information:

- The installation and adjustment of the device must be carried out by qualified personnel in accordance with the prescribed installation regulations taking the specified types of protection into account.
- This apparatus is a Protective Class II device and may only be connected to and operated at the voltage it was designed for.
- Make sure the connections are in perfect order.
- Make sure the telephone housing, the connecting cable and the receiver cord are not damaged. If the device is damaged, it may not be operated.
- While operating the device in commercial facilities, the accident prevention regulations of the Employers' Liability Insurance Association regarding the use of electrical systems and devices must be observed.
- The device may be operated solely under the stated ambient conditions. Unfavourable ambient conditions can lead to damage of the device and thus present a potential danger for the user.
- Regarding the assembly and installation please observe the respectively applicable installations regulations.

Unfavourable ambient conditions include:

- Humidity of air too high (>75% rel., condensing)
 - Moisture and dust (pay attention to the degree of protection)
 - Flammable gases, vapours and solvents not covered by the type of protection for the device
 - Too high ambient temperatures (> +55°C)
 - Too low ambient temperatures (< -20°C)
- During operation of the device the temperature must not exceed nor fall below the prescribed range of ambient temperatures. It is not allowed to operate the device with an additional cover.
 - Make sure the wiring is voltage-free upon connecting or disconnecting the wires in the terminal room.
 - If electrical connections must be carried through in the hazardous area, the enclosure must be opened and closed as follows:
 - Remove voltage from the device.
 - Loosen the fastening screws from the keypad insert
 - Remove the keypad insert and unfasten the keypad cable
 - Make the connections while the device is open

- When the work is done, plug the keypad back on, and place the keypad insert back on the lower part of the device.

Make sure the seal is correctly positioned and in perfect working order. Then tighten the fastening screws in a diagonal pattern.

- Only blind plugs and cable glands as prescribed by the manufacturer may be used.

Should these points not be observed, the explosion protection of the device cannot be guaranteed. The device then poses a potential threat to the user's life and can cause the ignition of an explosive atmosphere.

CE symbol

We hereby declare this product is in compliance with the Essential Health and Safety Requirements of

ATEX Directive 2014/34/EU,
EMC Directive 2014/30/EU,
Low Voltage Directive 2014/35/EU and
RoHS Directive 2011/65/EU.

The appropriate standards, technical regulations und specifications you can take from the attached conformity declaration and the conformity declarations on our Website.

Subject to alterations
or errors

FHF Funke + Huster Fernsig GmbH · Gewerbeallee 15-19 · D-45478 Mülheim an der Ruhr · Germany
Phone +49 - 208 - 82 68 - 0 · Fax +49 - 208 - 82 68 - 286 · Mail info@fhf.de · www.fhf.de
Orders: fhf-orders@eaton.com · Requests: fhf-sales@eaton.com · Support: fhf-support@eaton.com



Powering Business Worldwide

Eaton's Crouse-Hinds Business
1201 Wolf Street · Syracuse, NY 13208
(866) 764-5454
crouse.customerctr@cooperindustries.com

Eaton is a registered trademark.

All other trademarks are property
of their respective owners.